HyperWare® Retail Software **Quick Reference Card**

Optimum T4205 SPOS32, Version 2.0

Note: Printing a second receipt, the customer receipt, is an option for all transactions.

ı	
ł	
l	
۱	
ı	_
Į	C
ı	-
I	O
ł	0
ł	=
l	•
۱	S
l	2
١	-
I	O

-			-						1	Г				Г	-	
Response	COMMS	Enter PIN	Sale Amount	Total Correct? Yes or No	Sale Amount	Swipe Customer Card	Swipe Customer Card	Terminal Display		Approval 1	Response	COMMS	Amount	Swipe Customer Card	Enter Card Number or	Terminal Display
			\$0.00	\$0.00	\$0.00					123456			\$0.00			
Transaction is accepted and receipt is printed.	Teminal dials host.	Enter.	Customer enters PIN on internal or attached PIN pad, then press	Verify total is correct, then press Yes/Enter.	Enter amount of sale, then press Enter.	Swipe customer debit card through card reader or manually enter card number.	Pless Enter / Transaction / Sale / Debit	Action	Debit Sale		Transaction is accepted and receipt is printed.	Terminal dials host.	Enter amount of sale, then press Enter.	enter card number.	Swipe customer credit card through card reader or manually	Action

EBT Sale

123456

O Lit I	
	Approval 123456
Transaction is accepted and receipt is printed.	Response
Terminal dials host	COMMS
Enter.	Enter PIN
Customer enters PIN on internal attached PIN pad, then press	Sale Amount \$0.00
Enter amount of sale, then press Enter.	Sale Amount \$0.00
	EBT Cash Benefit
Press screen button next to Food Stamp or EBT Cash Benefit.	Food Stamp
enter card number.	Confed Carrotter Carrot
Swipe customer credit card through card reader or manually	Swipe Customer Card
	Swipe Customer Card
Press Enter > Transaction > Sale > EBT.	Enter Card Number or
Action	Terminal Display

Credit Refund

Terminal Display	Action
Enter Card Number or	Press Enter > Transaction > Refund > Credit
Swipe Customer Card	
Swipe Customer Card	Swipe customer credit card through card reader or manually
Amount \$0.00	1
Resnonse	_
Transaction Accepted	
	Debit Refund
Terminal Display	Action
Enter Card Number or	Press Enter > Transaction > Refund > Debit.
Swipe Customer Card	
Swipe Customer Card	Swipe customer debit card through card reader or manually enter card number.
Amount \$0.00	DO Enter amount of refund, then press Enter.
Sale Amount \$0.00	00 Customer enters PIN on internal or attached PIN pad, then press
Enter DIN	Enter

HYPERCOM

Sale Amount Enter PIN

ransaction Accepted

Enter.
Transaction is accepted and receipt is printed.

HyperWare® Retail Software

Offline/Force

Enter Card Number or	Press Enter > Transaction > Offline > Sale (Offline).
Enter Card Number or Swipe Customer Card	Press Enter > Transaction > Online > Sale (Offline).
Swipe Customer Card	Swipe customer credit card through card reader.
Amount \$0.00	Enter amount of sale, then press Enter.
Enter Approval Code	Enter approval code, then press Enter.
Transaction Accepted	Offline/Force is complete.

Batch Settle

Settlement report is printed	Scanning Batch
	Approval 123456
Settlement is complete.	Response
Terminal dials host.	COMMS
Terminal scans for batch totals.	Scanning Batch
Press Yes/Enter to confirm refund total	Refund Total Correct? \$0.00
Press Yes/Enter to confirm sales total	Sales Total Correct? \$0.00
Terminal scans for batch totals.	Scanning Batch
Press 0 for all hosts or enter a host number, then press Enter.	Host Number
Enter merchant password, then press Enter.	Enter Password
or press Enter > Batch > Settle.	Swipe Customer Card
Press SETTLE button,	Enter Card Number or
Action	Terminal Display

Batch Report (Summary)

Scanning Batch	Swipe Customer Card	Enter Card Number or	Terminal Display
lerminal scans for batch totals and prints outliniary report.		Press REPORTS button, then press Summary.	Action

Batch Report (Audit)

Customer Copy Merchant Copy	g q	Terminal Display	Rep	Scanning Batch	Host Number	Swipe Customer Card	Enter Card Number or	Terminal Display
Press screen button next to Customer Copy or Merchant Copy. Receipt is printed.	Press REPORTS button, then press Reprint > Last.	Action	Reprint Last Receipt	Terminal scans for batch totals and prints Audit report.	Enter Host Number or '0' for all hosts.		Press REPORTS button, then press Audit.	Action

HYPERCOM

World Headquarters

8888 East Raintree Drive • Scottsdale, AZ 85260
480.642.5000 • 877.HYPERCOM within USA • Fax: 480.642.4655
E-mail: info@hypercom.com • web: www.hypercom.com
© Hypercom Corporation, 2008.